

# MRS adjustable footplates

The MRS rail can be placed at different heights from the CMM's bed by using multiple MRS legs to provide the required clearance for long styli and extension bars.

By using the optional MRS adjustable footplates shown below, the MRS rail can also be placed at different positions on the CMM's bed thereby ensuring that a maximised working volume can be achieved.


The MRS adjustable footplates can be used with the MRS standard leg and the MRS heavy duty leg arrangements.

---

**NOTE:** The MRS adjustable footplates kit part number is A-4192-0702 and comprises two footplates.

---

Assemble as shown in the diagrams below:

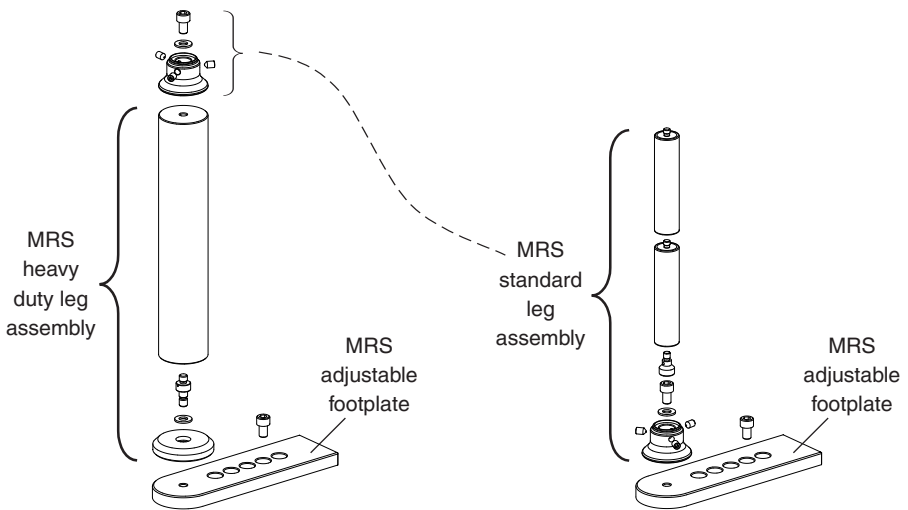

Assembly with MRS heavy duty leg

Assembly with MRS standard leg

[www.renishaw.com/MRS](http://www.renishaw.com/MRS)

 #renishaw

 +44 (0) 1453 524524

 [uk@renishaw.com](mailto:uk@renishaw.com)

© 2004–2024 Renishaw plc. All rights reserved. This document may not be copied or reproduced in whole or in part, or transferred to any other media or language by any means, without the prior written permission of Renishaw.

RENISHAW™ and the probe symbol are registered trade marks of Renishaw plc. Renishaw product names, designations and the mark 'apply innovation' are trade marks of Renishaw plc or its subsidiaries. Other brand, product or company names are trade marks of their respective owners. WHILE CONSIDERABLE EFFORT WAS MADE TO VERIFY THE ACCURACY OF THIS DOCUMENT AT PUBLICATION, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS AND LIABILITY, HOWSOEVER ARISING, ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW. RENISHAW RESERVES THE RIGHT TO MAKE CHANGES TO THIS DOCUMENT AND TO THE EQUIPMENT, AND/OR SOFTWARE AND THE SPECIFICATION DESCRIBED HEREIN WITHOUT OBLIGATION TO PROVIDE NOTICE OF SUCH CHANGES.

Renishaw plc. Registered in England and Wales. Company no: 1106260. Registered office: New Mills, Wotton-under-Edge, Glos, GL12 8JR, UK.

Part no.: H-1000-4064-02-A

Issued: 11.2024